

***We do not offer maintenance kits, but below are the recommendations:**

SERVICE / MAINTENANCE KIT

Purefire

50/80/110/140/200/210/300/399/460

Igniter	54246
Flame Sensor	54247
Gasket for Chamber	54187
Target wall (protects back wall of heat exchanger)	54185

SERVICE / MAINTENANCE KIT

Purefire

PFC 625/750

Igniter	54883
Igniter gasket	54882
Flame Sensor	54891
Flame Sensor gasket	54890
Hardware	Screw, M4 x 8 (local hrdwre)
Gasket (door seal for burner mounting plate)	54876
Target wall (protects back wall of heat exchanger)	54875

SERVICE / MAINTENANCE KIT

Purefire

PFC 850/1000/1500

Igniter	54698
Flame Sensor	54699
Gasket (for burner mounting plate)	54655
Target wall (protects back wall of heat exchanger)	54185